

ARLES FOUNTAIN ASSEMBLY INSTRUCTIONS

PUMP PARTS ENCLOSED:

PK300 (1)
#10 stopper (1)
Approx. 12" length of ½" black non-kink tubing, preassembled (1)
4mm Allen wrench (1)
Hose clamps (3) Note: Hose clamps can be used as flow restrictors

COMPONENTS:

FT-218A
40"l x 22"w x 41"h
737 lbs.
FT-218B
11"l x 8.5"w x 8"h
29 lbs.

Note: Component photos are not to scale.

TOOLS REQUIRED:

Bubble level




PUMP INFORMATION:

OEMPF320 — 320 GPH pump
16 ft. cord length

FOUNTAIN INFORMATION:

Fountain holds approximately 35 gallons of water
A cover for this fountain may be purchased on our website

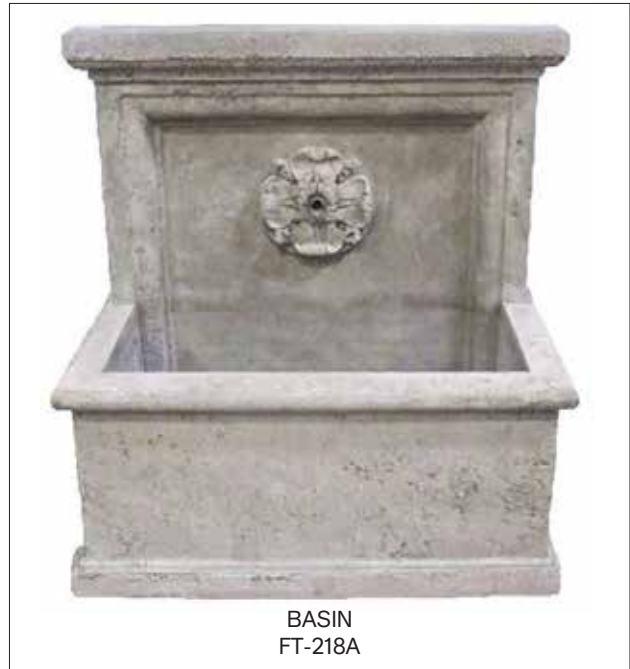

IMPORTANT PLEASE READ**TWO PEOPLE ARE RECOMMENDED FOR THE INSTALLATION OF THIS FOUNTAIN.**

Assemble your fountain on a level surface capable of holding a minimum of 950 pounds within a 6-square-foot area.

1. Position the basin (FT-218A) where the fountain is to be installed, ensuring that it is level.
2. Assemble the pump and tubing:
 - a. Using a hose clamp, attach one end of the 5/8" non-kink tubing to the pump outlet.
Note: This fountain uses the smaller of the two adapters secured to the power cord.
 - b. Place the stopper around the pump cord approximately 6" from the pump.
3. Feed the pump cord through the hole in the basin (FT-218A).
4. **Firmly** press the stopper into the hole evenly. *Note:* Using the handle of a screwdriver or hammer works best to press the stopper into place.
5. Attach the other clear end of the 5/8" tubing assembly over pipe protruding from the bottom of the basin (FT-218A).
6. Place the pump cover (FT-218B) over the pump.
7. Fill the fountain with water. *Note:* Do not allow pump to run dry, as it will cause damage to the pump.

GENERAL FOUNTAIN TIPS

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely under water to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

WINTER CARE

Fountain bowls/tops and other fountain components that collect water should not be left outside in the winter, since any component that fills with water and freezes may crack. Likewise, components such as pedestals that remain in a basin filled with water may also crack or crumble if the water freezes. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements.

However, if a fountain must be left outside:

1. Remove pump, rubber stoppers, drainpipes, finials and other small components for storage indoors. Removing stoppers or drainpipes prevents water from accumulating in the basin. Compression stoppers may be left on the pump cord for easier assembly next season.
2. Raise the fountain base off the ground with wood strips, so that the base will not freeze to the ground surface.
3. Cover or wrap the fountain with burlap or other absorbent material (an old blanket or towel) and then cover securely with plastic, making sure that water cannot accumulate in the basin or other fountain components and freeze.
4. Check periodically to ensure that plastic is secure and water is not accumulating in any fountain component.